


Floating Signage Installation

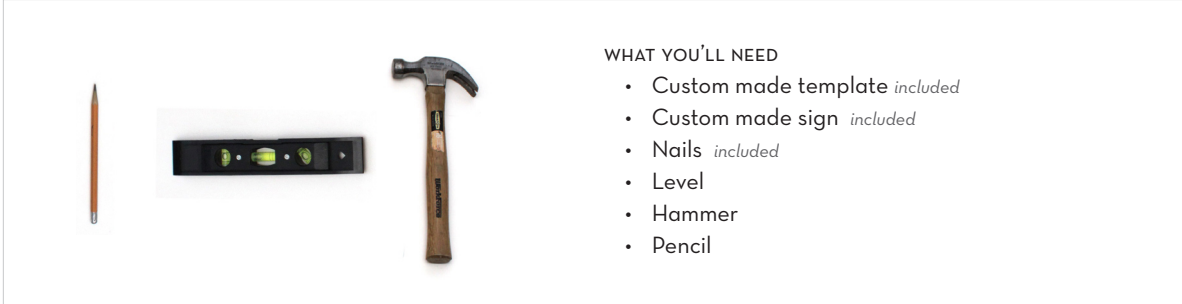

WHAT YOU'LL NEED


- Custom made template *included*
- Custom made sign *included*
- Nails *included*
- Level
- Hammer
- Pencil



STEP 1

Mark a level line

Use the cardboard template to determine where your sign should go. Use a level to mark the bottom edge of the template. Keep in mind that this may not be the baseline of your sign. Use a very light pencil line, so this can be erased later.

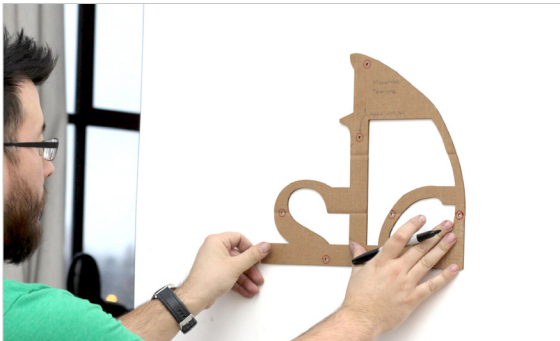

STEP 2

Line up the template


Align the cardboard template with the horizontal line. Double check that the position is correct. The cardboard template may have additional sections added to connect the fragile parts of the sign shapes.



STEP 3

Mark nail holes

The template you received should have pre-cut holes. Mark the top of each keyhole slot while keeping the template secure. Be sure to mark the center to avoid small misalignments.

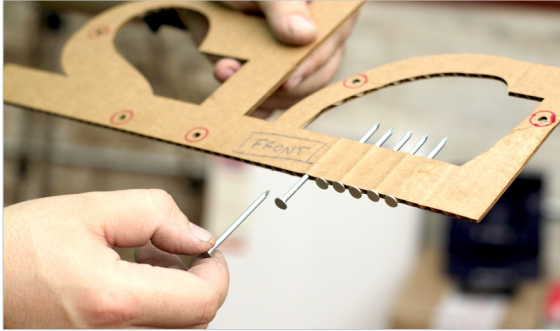

STEP 4

Locate nails

The nails for your sign are included. Standard drywall screws may be substituted for walls that require anchors, like cinderblock or concrete walls.



STEP 5

Pound in nails

Use a hammer to pound them into the wall. Be sure to leave about 1/8" sticking out for the sign to hang on.



STEP 6

Hang sign

If the nails or screws are installed properly, the wood sign should fit securely over the heads. If you notice that things are too tight and the sign pieces will not slot down over the nail head, use the hammer's claw to pull the nail out from the wall a small amount.

Keep your template in a safe place in case you decide to move the sign in the future.